

ASSEMBLY INSTRUCTIONS

BASE CABINET (B09-B21/VB09-VB21)

CABINET PARTS LIST

A-Door&Frame B-Side Panels(2) D-Bottom Panel E-Back Panel

F-Shelf(1) H-Toe Kick K-Drawer Box(1)

HARDWARE PARTS LIST


1-Shelf Clips(4) 2-Corner Braces(4)

3-Screw($\Phi 4*25-6$)


4-Screw($\Phi 3.5*12-8$)

5-Screw($\Phi 3.5*12-32$)


Step1:

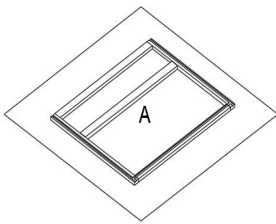


Step2:

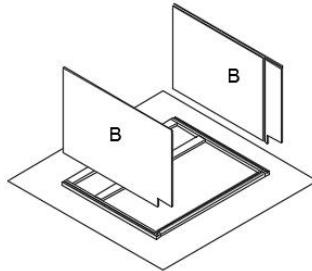


Step3:

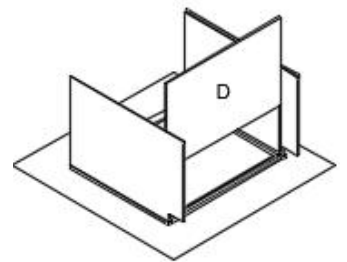


Step4:

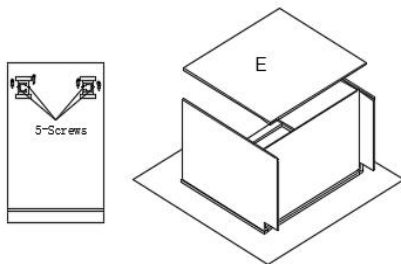


Step5:

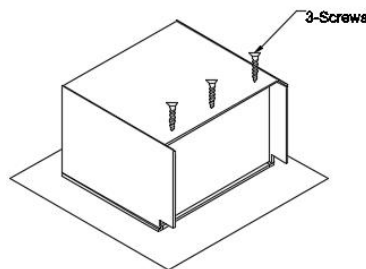


Step6:

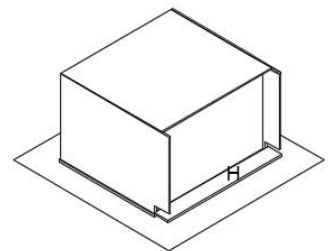


Step7:

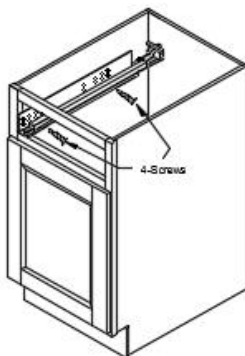


Step8:

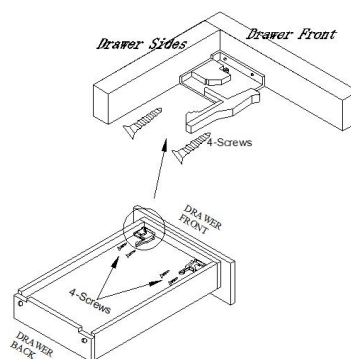

Step9:

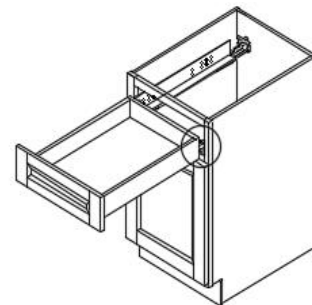

Drawer Rear



Step10:

