

# ASSEMBLY INSTRUCTIONS


## RO-Rollout Tray (NOT including 1/8" Drill Bit) KIT

### PARTS LIST


#### **A- RO Box(1) E- Side-mount Slides(1 pair)** **HARDWARE PARTS LIST**

7- Screws (Φ 3.5\*16-10pcs)

Step1: Measure and mark Pilot hole

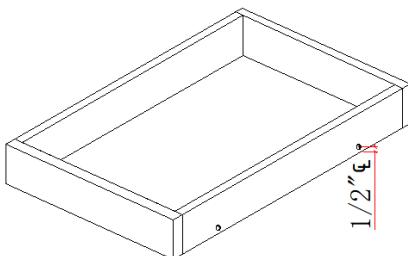


Step2: Mount short parts of (E) on each side of (A), using 7-screws(4pcs).

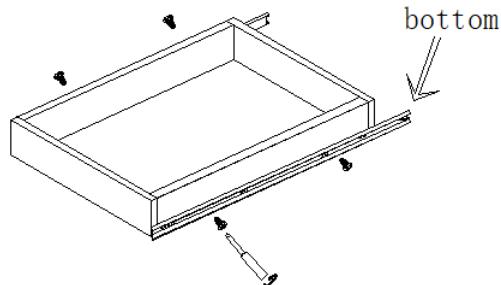


Step3: Must Predrill the Pilot Hole (1/4" Depth or less) on Face Frame of Cabinet. (Recommend 1/8" drill bit)


For example (Not recommend), RO is on the bottom of Base Cabinet.

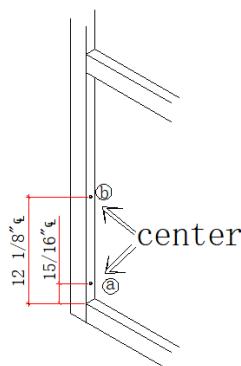


ⓐ 15/16"¢ pilot hole

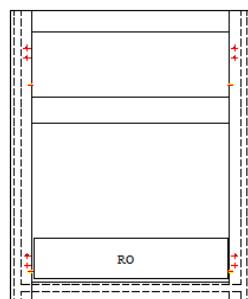


ⓑ 12 1/8"¢ pilot hole

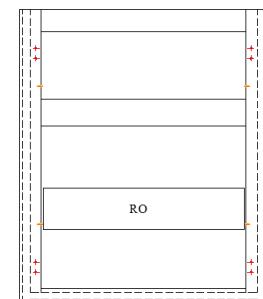

Step4: Mount long parts of (E) on Face Frame, using 7-screws(2pcs).

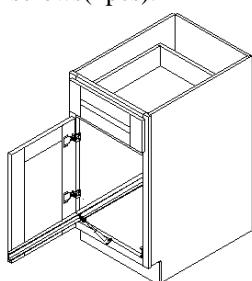

Step5: Mount Rear Brackets of (E) on Back Panel, using 7-screws(4pcs).

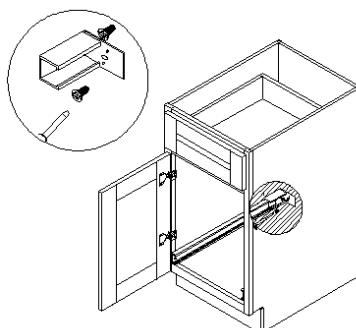

Must be Horizontal Alignment.

Step6: Connect two parts of (E) slide together.

