

# ASSEMBLY INSTRUCTIONS

## Wooden Drawer / Trash Can for TB18 (NOT including TB18 & 1/8" Drill Bit)




### KIT PARTS LIST

**A-Drawer Front(1) B-Drawer Sides(2) C-Drawer Rear(1) E-Slides(1 pair)  
F-Trash can(1 pair)**


### HARDWARE PARTS LIST

**6-Screw(Φ 4\*25-8pcs) 7-Screw(Φ 3.5\*16-10pcs) 8-Screw(Φ 3.5\*12-16pcs) 9-L shape Metal(2 pairs)**


Step1: Connect (A) with (B) using glue. Step2: Connect (C) with (B) using glue. Step3: Connect using 6-screws(4pcs).

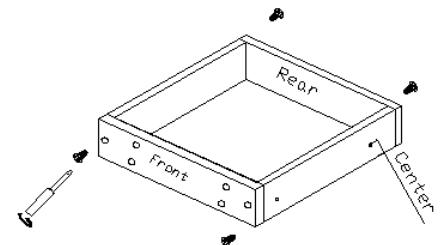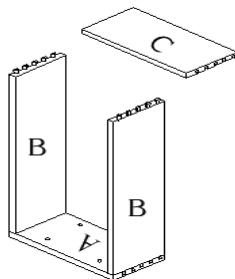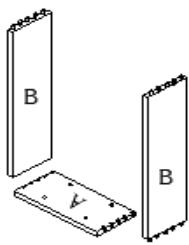


Step4: Mount short parts of (E) on each (B). using 7-screws(4pcs).

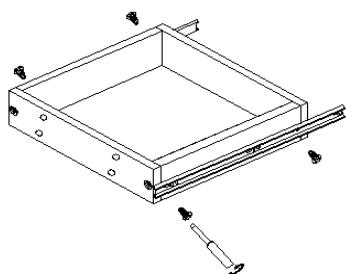


Step5: Connect Drawer to Door. using 6-screws(4pcs).

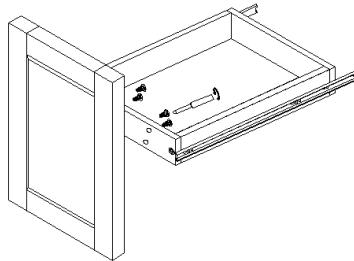


Step6: Mount (9)-L shape metal on Door & Drawer, using 8-screws(16pcs).

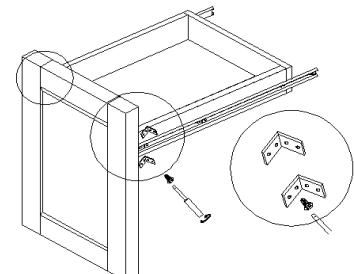



Step7: **Must Predrill the Pilot Hole (1/4" Depth or less)** on Face Frame of TB18. **(Recommend 1/8" drill bit)**

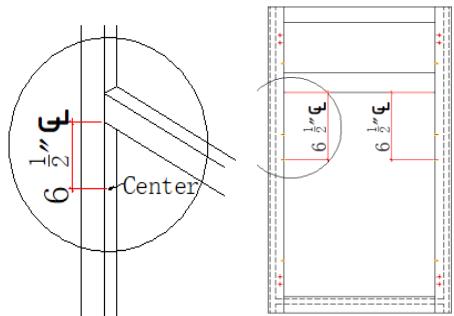

Step9: Connect two parts of (E) slide together

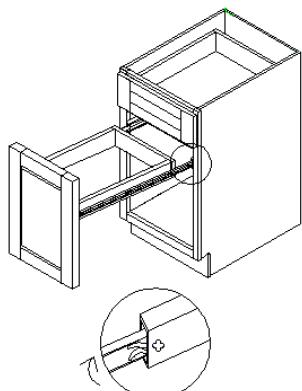

Step8-1: Mount long parts of (E) on Face Frame and 8-2: Mount Rear Brackets of (E) on Back Panel, using 7-screws(4pcs).

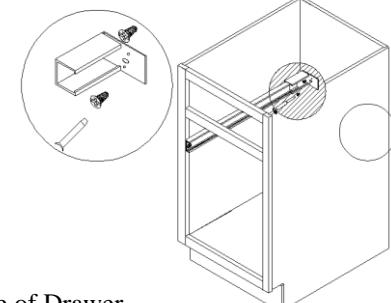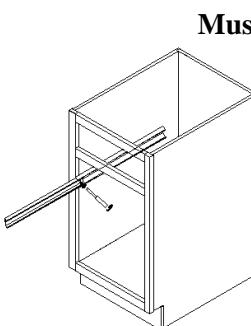

Step10: Put (F) inside of Drawer

